Valve testing system VPS 504 for multiple actuators

8.10





Technical description

The VPS 504 is the valve proving system for DUNGS multiple actuators. The valve proving system complies with EN 1643:

- Equipment operates independent of residual pressure in the range of the permissible operating range.
- Test volume ≤ 4 l
- Setting work not necessary on site
- Short test period: min. 10 s, max. 26 s
- Tightness or leaks are displayed by an LED
 - External fault display possible for series 02, series 04 and series 05
- Group fault alarm optional for series 01 (SSM)
- Suitable for TRD systems
- Electrical connection possible by plug connection series 01, 02, 03. No rewiring is required for contact allocation as per DIN 4791.
- Series 04 and series 05: electrical connection at screw terminals via PG 13.5 cable entry

Application

Valve proving system for DUNGS single valves, DMV double solenoid valve and GasMultiBloc MB.

The VPS 504 can also be used for monitoring the DUNGS solenoid valves up to DN 80, with and without bypass connection.

24 VDC design for gas motors.

Suitable for gases of gas families 1, 2, 3 and other neutral gaseous media.

Approvals

EC type test approval as per EC Gas Appliance Directive:

VPS 504... CE-0085 AP 0168 EC type test approval as per EC Pressure Equipment Directive:

VPS 504... CE0036

Approvals in other important gas consuming countries. Special design for the North American market with $\rm U_L$, FM and CSA registration.


VPS 504 Valve provi	ng system for automatic shutoff valves as per EN 161, Class A and Class B
Specifications	
Operating pressure	max. 500 mbar (50 kPa)
Test volume	≤ 4.0
Pressure increase by motor pump	≈ 20 mbar
Nominal voltage (Permissible voltage range)	230 V AC (-15%) to -240 V (+6%), VPS 504 series 05: 24 VDC For further voltages, refer to type overview
Frequency	VPS series 01-04: 50 Hz or 60 Hz Series 05: DC
Rating requirement	During pumping time approx. 60 VA, in operation 17 VA
Prefuse (provided by customer)	10 A quick-acting or 6.3 A slow-acting fuse
Fuse installed in housing cover, replaceable	Microfuse 6.3 slow-blow L 250 V; IEC-127-2/III (DIN 41 662)
Switching current	Operating output VPS 504 Series 01, 02, 03, 04, 05: max. 4 A Interference output VPS 504 Series 02, 04, 05: max.1A Refer to motor startup current!
Degree of protection	VPS 504 Series 01, 02, 03: IP 40 VPS 504 Series 04, 05: IP 54
Ambient temperature	50 Hz 230 VAC -15°C to +70°C others: -15°C to +60°C
Release time	Approx. 10 - 26 s, depending on test volume and input pressure
Sensitivity limit	max. 50 l/h At inlet pressures of < 50 mbar, limit pressure rates well below 50 l of air per hour occur due to the mode of operation. This allows for applications involving low inlet pressures.
Switch-on duration of control	100 % ED
Max. number of test cycles	20/h. Wait for at least 2 minutes after carrying out more than 3 consecutive test cycles.
Installation position	vertical, horizontal, not upside down
Media • Standard model	Gas families 1, 2, 3 and other gaseous media.


Not suitable for butane.

Gas family 3 and butane

• Liquefied gas model

VPS 504 sectional diagram

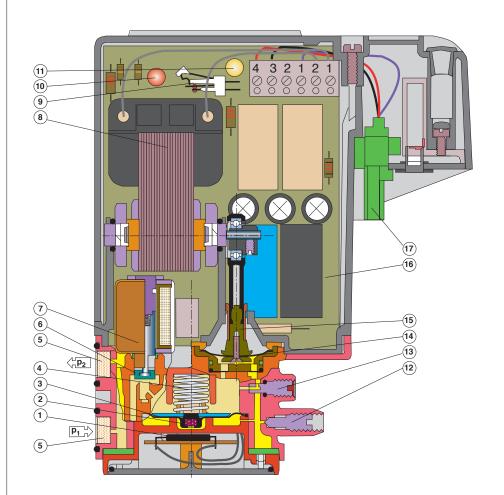

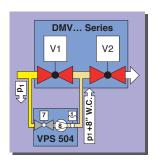

1	Hall switch
2	Solenoid

SolenoidPressure switch diaphragms

4 Compression spring

5 Filter

6 Solenoid valve anchor

7 Solenoid valve coil8 Pressure pump

9 Unlock switch

10 Fault lamp

11 Operating lamp

12 Test nipple

13 Volume restrictor

14 Pump diaphragm

15 Pump linkage

16 PCB

17 Plug connection

18 Equipment fuse

19 Spare fuse


Functional description

The VPS 504 operates depending on pressure build-up.

The program module starts to function when heat is requested.

Test is performed depending on the burner functional procedure:

Check **prior to** burner start or Check **during** pre-purge period or Check after burner shut-down

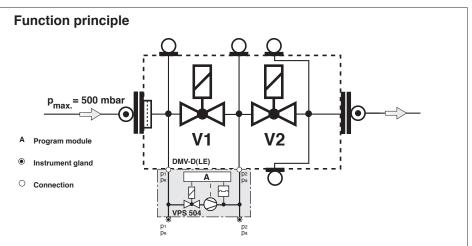

Release period t₋

Period which a VPS requires to perform a complete operation procedure. The release period of the VPS 504 depends on test volume and input pressure:

$$V_{\text{Test}}$$
 < 1.5 l p_{e} > 20 - 500 mbar $t_{\text{F}} \approx 10 \text{ s}$

$$V_{\text{Test}} > 1.5 \text{ l}$$


 $P_{\text{e}} > 20 \text{ mbar}$ $t_{\text{F}} > 10 \text{ s}$

t_F max. ≈ 26 s


Test period P,


Pumping time of motor pump.


Test volume V_{Test} Volume between V1 output-side and V2 input-side and the intermediate tube pieces.

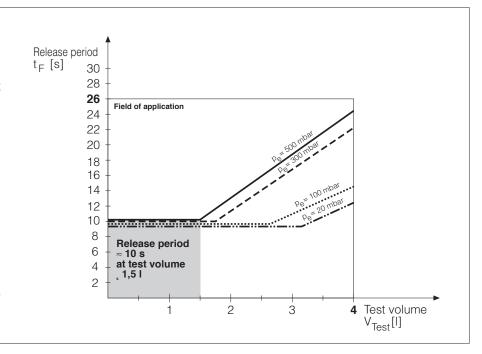

Program sequence

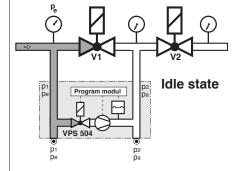

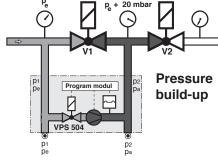

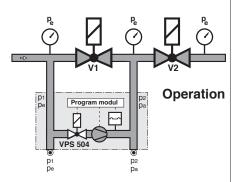

Idle state: Valves 1 and 2 are closed. Pressure build-up: The internal motor pump increases the gas pressure in the test section by approx. 20 mbar compared to the input-side pressure

applied to valve V1.

During the test period, the installed differential pressure switch monitors the test section for leakage. If the test pressure is attained, the motor pump is switched off (end of test period). The release time (10-26 s) depends on the


test volume (max. 4.01) and input pressure (max. 500 mbar). If the test section is tight, the contact is released to the automatic burner control after max. 26 s - the yellow signal lamp lights up.

If the test section is leaky or if the pressure increase by +20 mbar is not attained during the test period (max. 26 s), the VPS 504 switches to fault. The red signal lamp lights as long as the contact release by the regulator or thermostat is present (heat requirement).

If there is a short power failure during the test or burner operation, the test is started again automatically.

If the pumping time < approx. 10s, the pressure difference between the testing system and the inlet pressure is balanced after pumping is finished.

Operation: The internal valve of the VPS 504 is closed.

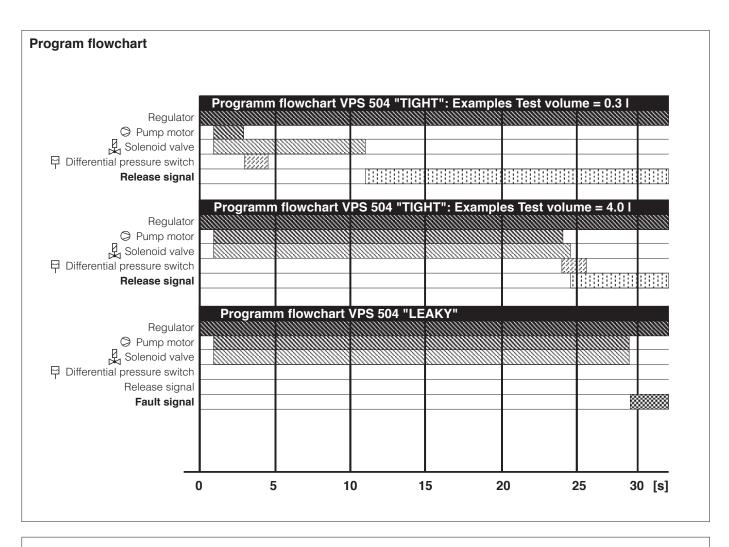

Electrical connection VPS 504 Series 01

The VPS 504 Series 01 is connected in series between temperature regulator and automatic burner control via a 7-pole connector. Connector pin assignment between burner and boiler is performed as per DIN 4791. For pin assignment, refer to connection diagram.

If the heat generator is wired as per DIN 4791, no boiler- or burner-side rewiring is necessary for electrical connection.

The burner female connector is connected with the cable-to-cable male connector of VPS 504 Series 01.

The female connector VPS 504 Series 01 is connected with the cable-to-cable male connector of the heat generator.

F1 Fuse

F2 Switch or limiter

F3 Regulator

H1 Fault signal

H2 Operation signal


P1 Operating hours counter

Stage 1

S1 Switch

X1B Female connection

X1s Male connection

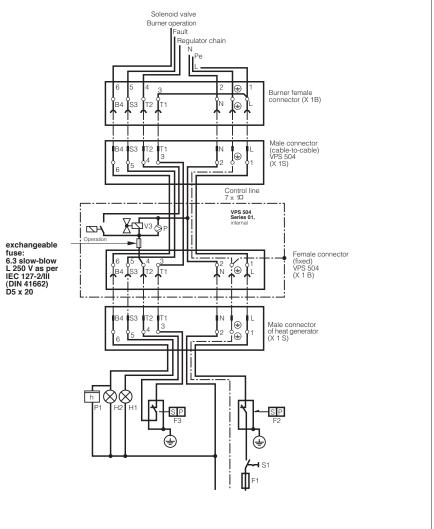


Electrical connection VPS 504 Series 01 SSM Group fault alarm

The electrical connection of VPS 504 Series 01 SSM is performed the same way as with the VPS 504 Series 01 (see page 5).

Additional switching characteristic of VPS 504 Series 01 SSM

If the test path is "untight", the VPS switches to fault.

An additional relay in the VPS interrupts the burner fault line S3 between burner and heat generator. At the same time, voltage is applied from the heat generator to S3 line and the LED H1

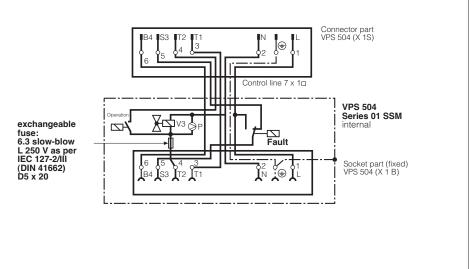


Electrical connection VPS 504 Series 02

The VPS 504 Series 01 is connected in series between temperature regulator and automatic burner control via a 7-pole connector.

The boiler male connector is inserted into the female connector of VPS 504.

For pin assignment of female connector VPS 504 and heat generator male connector, refer to connection diagram.

Switching feature: No disconnection between operating voltage circuit and control circuit.

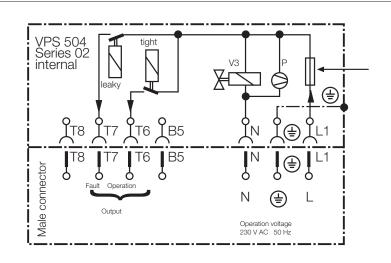

Electrical connection VPS 504 Series 03


The electrical connection of VPS 504 Series 03 is performed as in VPS 504 Series 01.

Additional switching feature of VPS 504 Series 03

If a fault signal is existent on S3 (burner fault), the regulator chain is bridged to the burner via an additional relay in VPS 504 Series 03 and at the same time the operating voltage of VPS 504 Series 03 is interrupted.

After eliminating the burner fault, the valve proving system is restarted.


Only the fault signal coming from the automatic burner control of the burner may be connected to connection S3. If you do not observe this instruction, persons may be injured or objects may be damaged. Therefore, strictly keep to this instruction.

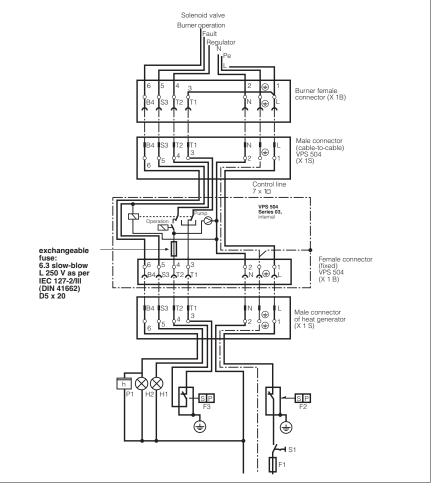

Electrical connection VPS 504 Series 04

PG 13.5 cable duct and connection to screw terminals below cover in housing (see Dimensions VPS 504 S04).


Floating control room signal may only be used for signal-ling, never for burner release.

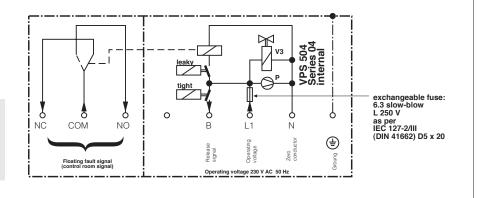

Electrical connection VPS 504 Series 05

PG 13.5 cable duct and connection to screw terminals below cover in housing (see Dimensions VPS 504 S04).

Operating voltage range 20 V - 30 V DC. Refer to motor startup current!

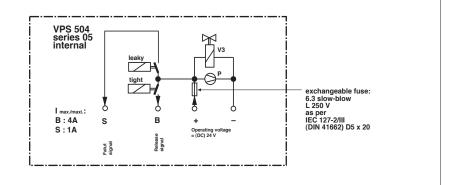

Test volume of DUNGS multiple actuators MB-D..., MB-ZR..., MB-VEF..., DMV-..., MBC-...

Туре	Nominal diameter Rp/DN	Test volume [l]	Туре	Nominal diameter Rp/DN	Test volume [I]
DMV-D(LE) 503/11 DMV-D(LE) 507/11 DMV-D(LE) 512/11 DMV-D(LE) 520/11 DMV-D(LE) 525/11 DMV-D(LE) 5040/11 DMV-D(LE) 5050/11	Rp 3/8 Rp 3/4 Rp 1 1/4 Rp 2 Rp 2 DN 40 DN 50	0.03 0.10 0.24 0.24 0.44 0.38 0.39 0.69	MB-D(LE) 403 MB-D(LE) 405 MB-D(LE) 407 MB-D(LE) 410 MB-D(LE) 412 MB-D(LE) 415 MB-D(LE) 420	Rp 3/8 Rp 1/2 Rp 3/4 Rp 1 Rp 1 1/4 Rp 1 1/2 Rp 2	0.04 0.11 0.11 0.33 0.33 0.24 0.11
DMV-D(LE) 5065/11 DMV-D(LE) 5080/11 DMV-D(LE) 5100/11 DMV-D(LE) 5125/11 DMV-1500-D DMV(DLE) -65 DMV(DLE) -80 DMV(DLE) -100	DN 65 DN 80 DN 100 DN 125 Rp 2 DN 65 DN 80 DN 100	0.69 1.47 2.28 3.56 0,44 1,47 2,28 3,55	MB-ZRD(LE) 405 MB-ZRD(LE) 407 MB-ZRD(LE) 410 MB-ZRD(LE) 412 MB-ZRD(LE) 415 MB-ZRD(LE) 420 MB-VEF 407 MB-VEF 412 MB-VEF 415 MB-VEF 420 MB-VEF 425 MBC 300 MBC 700 MBC 1200 MBC 1900 MBC 3100 MBC 5000	Rp 1/2 Rp 3/4 Rp 1 Rp 1 1/4 Rp 1 1/2 Rp 2 Rp 3/4 Rp 1 1/2 Rp 2 Rp	0.11 0.11 0.33 0.33 0.24 0.24 0.11 0.33 0.24 0.24 0.24 0.24 0.24 0.24 0.44 0.05 0.61 2.05 1.47 2.28 3.55

Using the VPS 504 at DUNGS individual solenoid valves .../5

For mounting the VPS 504 to valves **Rp** 1 1/2 to **Rp** 2, the adapter kit, **Order No. 205 360** is required.

For mounting the VPS 504 to valves **DN 40 to DN 80**, the adapter kit, **Order No. 222 740** is required.


Determining test volume V_{Test}

- 1. Determine output-side volume of V1. Refer to table for Rp 1/2 to DN 80.
- 2. Determine input-side volume of V2. Refer to table for Rp 1/2 to DN 80.
- 3. Determine volume of intermediate tube piece 3.

Refer to table for Rp 1/2 to DN 80.

4. V_{Test} = Volume _{Valve 1} + Volume _{Intermediate tube piece} + Volume _{Valve 2}



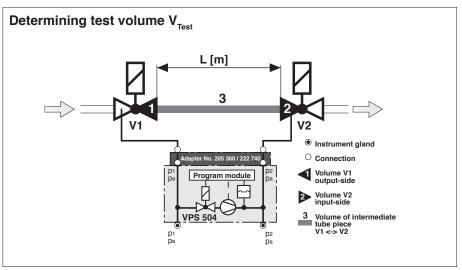

Determining test volume V_{Test} for DUNGS individual solenoid valves .../5

Nominal diameter	Valve volum V1 output-side+	ie [l]	Test volume [I] = Volume V1 output-side + V2 input-side + tube length Tube lengths between individual valves L [m]								
Rp / DN	V2 input-side	DN	0.8 Rp	ō m DN		1.0 Rp) m DN	1.8 RP	5 m DN	2.0 m Rp	DN
Rp 1/2	0.07		0.171			0.27 I		0.37		0.47	
Rp 3/4 (DN 20	0.121		0.27			0.42		0.57		0.72	
Rp 1 (DN 25)	0.20		0.451			0.70		0.95		1.20	
Rp 1 1/2 / DN 4	0 0.50	0.70	1.101	1.35		1.70	2.00	2.80	2.65	2.80	3.30
Rp 2 / DN 50	0.90	1.20	1.90	2.20		2.90 I	3.201	3.90			
DN 65		2.00		3.70					he max. tes		of 4.0 I
DN 80		3.80						<u> </u>	nust not be e	xceeded.	

Startup

- 1. Check test section for leaks after assembly.
- 2. Start test by using temperature regulator and/or restart or by pressing the reset button of VPS 504.

3. If the test section is tight

Depending on the length of the test section and the residual pressure applied, the pumping time is between 3 s and 26 s.

The release for the automatic burner control is then given after approx. 10 s at the earliest (at small test volumes and small input pressures) and after approx. 26 s at the latest (at large test volumes and large input pressures) - the yellow signal lamp lights up.

If the test section is leaky

The test pressure is not attained. The motor pump switches off, the red

fault lamp lights up. Switch-through to the automatic burner control does not take place.

Functional check

By opening a screw plug in test nipple $p_2(p_a)$ during test period (pumping time), leakage can be simulated and a function check can take place.

Setting

The VPS 504 must **not** be adjusted on site.

Assembly

Directly flange the VPS 504 laterally to the DUNGS multiple actuators (mounting is possible on left-hand or right-hand side) using two 10.5 x 2.25 O rings and four M4 x 16 self-tapping screws.

If an exhaust gas valve is installed in the boiler, it must be open at the beginning of the test.


In order to prevent functional and leakage problems, we recommend the use of solenoid valves as per EN 161 Class A and Class B.


Insufficiently shielded frequency converters could cause faults in the VPS due to network disturbances.


Make provisions for sufficient

electrical shielding.


Dimensions [mm] VPS 504 Series 01, Series 03

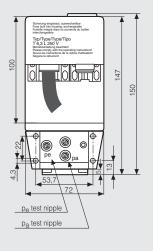


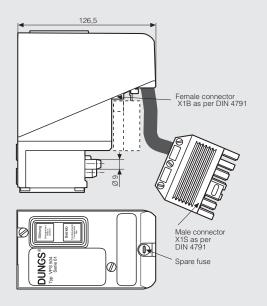


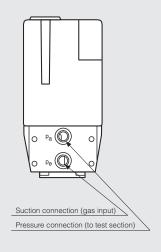


Dimensions [mm] VPS 504 Series 02

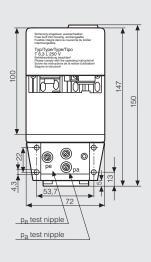


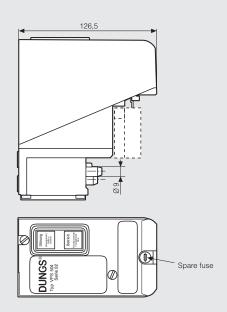

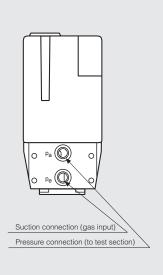

Dimensions [mm] VPS 504 Series 04, 05

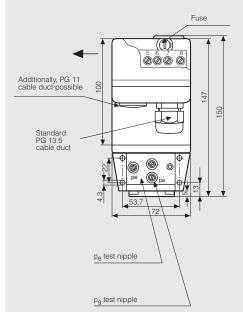

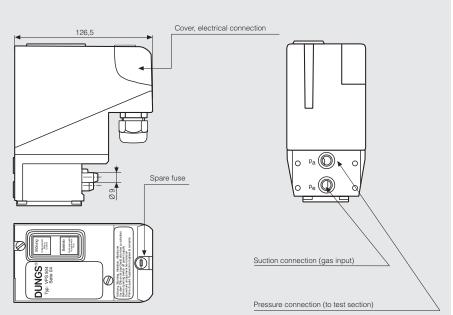



VPS 504 type overview / accessories / order data

co / oraci aata					
	24 VDC	230 V 50 Hz	220 V 60 Hz	120 V 60 Hz	110 V 50 Hz
Cable length: 0.30 m Cable length: 0.85 m Cable length: 1.50 m Cable length: 2.00 m Cable length: 0.85 m Cable length: 2.00 m		219 873 219 874 219 875 219 876 227 462 227 527	222 390		223 464
with male connector without male connector with male connector	225 481	219 877 219 878 226 315	222 389		223 463
Cable length: 0.30 m Cable length: 1.50 m		219 879 223 590			
VPS 504 Series 04 Connection to screw terminals PG 13.5 cable duct Additionally, PG 11 possible Floating fault signal (control room signal) IP 54 degree of protection Liquefied gas model					
Gasmotors (CSA)	224 983				
U _L , FM, CSA				221 073	
Accessories/spare parts Adapter kit VPS 504 for solenoid valves up to Rp 2 Adapter kit VPS 504 for solenoid valves from DN 40 to DN 80 7-pole male connector, 2 cable inputs with strain relief (series 02) 7-pole male connector, 4 cable inputs with PG 11 (series 02) 7-pole male connector, 4 cable inputs with strain relief (series 02) Mounting kit (4 x M4 x 16,2, 2 x O-Ring, 2 x filter insert) Appliance fuse link (5 pieces) Spare parts set VPS filter					
	Cable length: 0.30 m Cable length: 0.85 m Cable length: 1.50 m Cable length: 2.00 m Cable length: 0.85 m Cable length: 2.00 m with male connector without male connector with male connector Cable length: 0.30 m Cable length: 1.50 m Gasmotors (CSA) U _L , FM, CSA es up to Rp 2 es from DN 40 to DN 80 with strain relief (series 02) with PG 11 (series 02) with strain relief (series 02)	Cable length: 0.30 m Cable length: 0.85 m Cable length: 1.50 m Cable length: 2.00 m Cable length: 2.00 m Cable length: 2.00 m with male connector without male connector with male connector Cable length: 0.30 m Cable length: 1.50 m Cable length: 1.50 m al) Gasmotors (CSA) 224 983 L _L , FM, CSA Es up to Rp 2 Es from DN 40 to DN 80 with strain relief (series 02) with PG 11 (series 02) with strain relief (series 02) with strain relief (series 02)	Cable length: 0.30 m Cable length: 0.85 m Cable length: 1.50 m Cable length: 2.00 m with male connector without male connector with male connector with male connector 225 481 219 877 219 878 226 315 Cable length: 0.30 m Cable length: 1.50 m 219 879 223 590 219 881 al) 226 316 Gasmotors (CSA) U _L , FM, CSA 224 983 U _L , FM, CSA 225 360 222 740 231 807 231 808 231 809 231 808	24 VDC 230 V 50 Hz 220 V 60 Hz	24 VDC 230 V 50 Hz 120 V 60 Hz

We reserve the right to make any changes in the interest of technical progress.

Head Offices and Factory Karl Dungs GmbH & Co. KG Siemensstraße 6-10 D-73660 Urbach, Germany Telephone +49 (0)7181-804-0 Fax +49 (0)7181-804-166 Postal address Karl Dungs GmbH & Co. KG Postfach 12 29 D-73602 Schorndorf, Germany e-mail info@dungs.com Internet www.dungs.com